

PARTS CATALOG



www.skuteryostrow.pl

200ST-F

目 录

(INDEX)

CYLINDER ASSEMBLY.....	1	STEERING.....	25
VALVE MECHANISM.....	2	FRONT SUSPENSION, WHEEL.....	26
CRANKCASE COVER.....	3	FUEL TANK.....	27
CLUTCH.....	5	SEAT.....	28
OIL PUMP.....	6	FRONT WHEEL.....	29
CRANKCASE.....	7	REAR WHEEL.....	30
CRANKSHAFT/PISTON/CONNECTING ROD COMP.....	9	STEERING HANDLE. CABLE.....	32
TRANSMISSION MECHANISM.....	10	STAND. FOOTREST.....	33
GEARSHIFT MECHANISM.....	12	GUARD.....	34
MAGNETO COMP.....	14	HEADLIGHT.....	35
ELECTRIC STARTING MECHANISM.....	15	HANDLE SWITCH. LEVER.....	36
CARBURETOR.....	16	ELECTRICAL 1.....	37
REAR CRANKCASE COVER.....	18	ELECTRICAL 2.....	38
FRAME.....	19	EXHAUST MUFFLER.....	39
FRONT FENDER.....	20	REAR LAMP.....	40
REAR FENDER.....	21	WIRE HARNESS	41
REAR ARM.....	22	ACCESSORY I.....	42
SHAFT DRIVE.....	23	ACCESSORY II.....	43
REAR SUSPENSION.....	24	ACCESSORY III.....	44

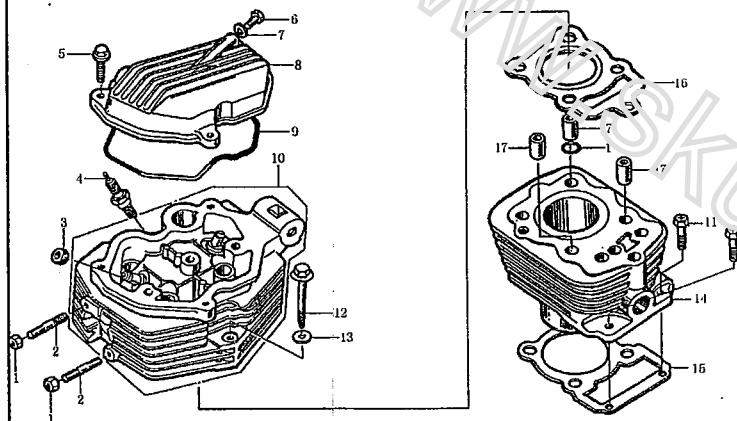


FIG.1 气缸部件 CYLINDER ASSEMBLY

RET. NO.	PART NO.	DESCRIPTION	名 称	Q 'TY
1	90101-20100000160	O-RING 10 × 1.6	O形密封圈 10 × 1.6	1
2	91138-1008-0000	STUD M6 × 35	缸头排气口双头螺栓 M6 × 35	2
3	1572B-1008-0000	VALVE STEM SEAL ASSEMBLY	挡油罩组合	2
4	81300-1006-0000	SPARK PLUG (D8TC)	火花塞(D8TC)	1
5	B05789000600287	BOLT M6 × 28	螺栓 M6 × 28	3
6	B05789000600127	BOLT M6 × 12	螺栓 M6 × 12	1
7	93301-70651012000	WASHER 6.5 × 1 × 12 (ALUMINIUM)	铝垫圈 6.5 × 1 × 12	1
8	11226-1022-0000	UPPER COVER, CYLINDER HEAD	气缸头上盖	1
9	90103-1008-0000	GASKET, CYLINDER HEAD UPPER	气缸头上盖密封圈	1
10	1122B-1034-0000	COVER CYLINDER HEAD ASSEMBLY	气缸头组合	1
11	91113-1022-0000	BOLT M6 × 22	缸体箱体连接螺栓 M6 × 22	2
12	91114-1008-0000	BOLT M8 × 78	缸头缸体连接螺栓 M8 × 78	1
13	93301-90552218000	WASHER 8.5 × 2.2 × 18 (COPPER)	铜垫圈 8.5 × 2.2 × 18	1
14	1110B-1034-0000	ASSEMBLY, CYLINDER BLOCK	气缸体部件	1
15	90205-1034-0000	GASKET, CYLINDER BLOCK	气缸体密封垫	1
16	9022B-1034-0000	GASKET ASSEMBLY, CYLINDER HEAD	气缸头密封垫组合	1
17	91521-10002000000	DOWEL PIN 10 × 20	定位销 10 × 20	3

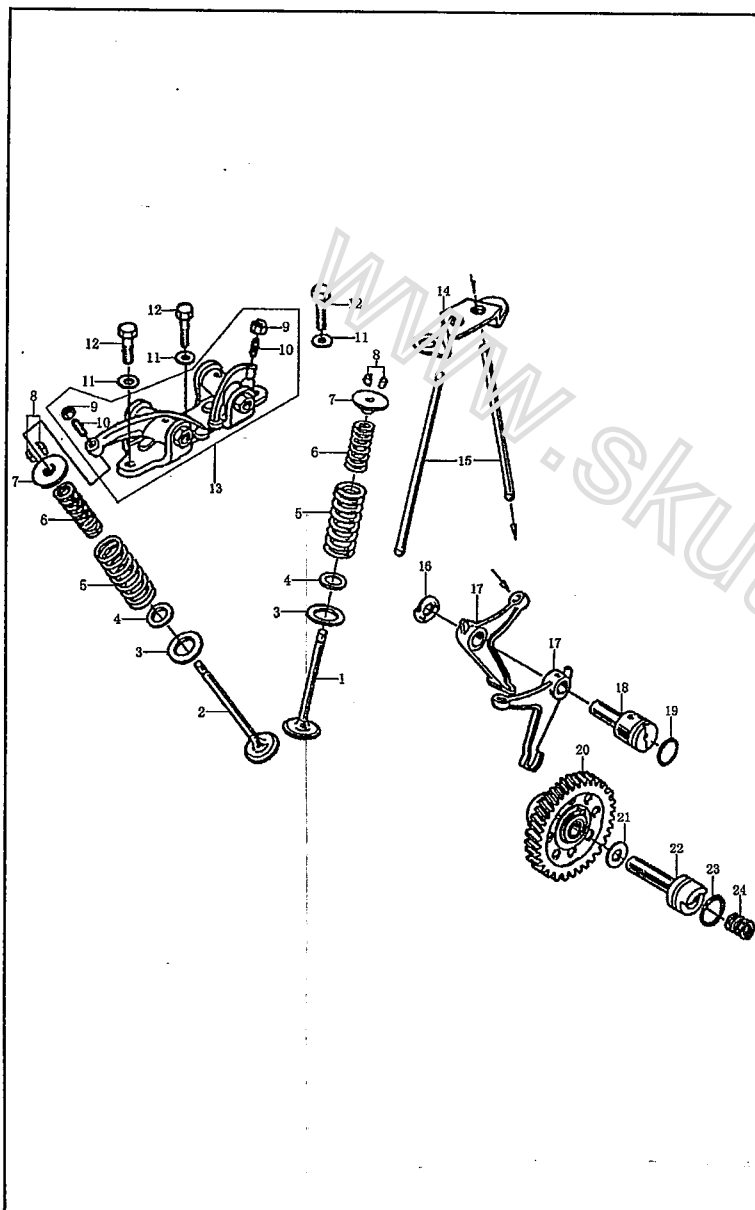


FIG.2 配气机构 VALVE MECHANISM

RET. NO.	PART NO.	DESCRIPTION	名 称	Q'TY
1	15701-J034-0000	INLET VALVE	进气门	1
2	15702-J034-0000	EXHAUST VALVE	排气门	1
3	15706-I008-0000	SEAT, OUTER SPRING, VALVE	气门外弹簧座圈(下)	2
4	15708-I008-0000	SEAT, INNER SPRING, VALVE	气门内弹簧座圈(下)	2
5	15703-I008-0000	VALVE OUTER SPRING	气门外弹簧	2
6	15704-I008-0000	VALVE INNER SPRING	气门内弹簧	2
7	15705-I008-0000	RETAINER, VALVE SPRING	气门弹簧座(上)	2
8	15707-I008-0000	VALVE COTTER	气门锁夹	4
9	15403-I008-0000	ADJUSTING NUT, VALVE CLEARANCE	气门间隙调节螺母	2
10	15404-I008-0000	ADJUSTING SCREW, VALVE CLEARANCE	气门间隙调节螺钉	2
11	9139-80852218000	WASHER 8.5 × 2.2 × 18 (COPPER)	铜垫圈 8.5 × 2.2 × 18	3
12	91180-1118-0000	BOLT M8 × 28	上摇臂螺栓 M8 × 28	3
13	1510A-I008-0000	ROCKER ARM ASSEMBLY, VALVE	气门摇臂组合	1
14	15501-I008-0000	LEADING RACK, PUSH ROD	推杆导架	1
15	1532A-I008-0000	PUSH ROD ASSEMBLY	推杆组合	2
16	93303-51230220900	WAVE WASHER 12.3 × 0.2 × 20.9	波形垫圈 12.3 × 0.2 × 20.9	1
17	15407-I008-0000	LOWER ROCKER ARM	下摇臂	2
18	15408-I008-0000	SHAFT, LOWER ROCKER ARM	下摇臂轴	1
19	90101-20180000250	O-RING 18 × 2.5	O形密封圈 18 × 2.5	1
20	1510A-I008-0000	ASSEMBLY, TIMING DRIVEN SPROCKET	正时从动齿部件	1
21	93301-51421024000	WASHER 14.2 × 1 × 24	凸轮轴垫圈 14.2 × 1 × 24	1
22	15105-J034-0000	CAMSHAFT	配气凸轮芯轴	1
23	90101-20200000250	O-RING 20 × 2.5	O形密封圈 20 × 2.5	1
24	15109-I008-0000	SPRING, CAMSHAFT, VALVE	配气凸轮轴弹簧	1

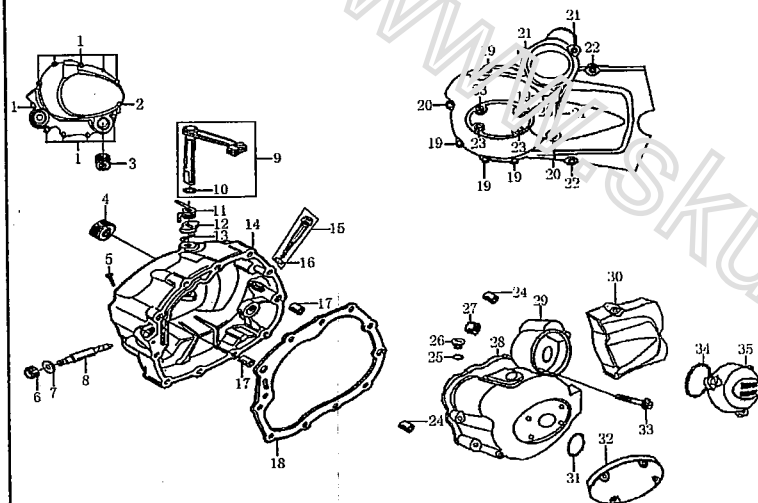


FIG.3 曲轴箱盖 CRANKCASE COVER

RET. NO.	PART NO.	DESCRIPTION	名 称	Q'TY
1	B166740A0600407	BOLT M6 × 40	小盘螺栓 M6 × 40	10
2	B166740A0600507	BOLT M6 × 50	小盘螺栓 M6 × 50	1
3	12426-1008-0000	WINDOW, OIL LEVEL	机油观察窗	1
4	90304-1006-0000	OIL SEAL 16 × 28 × 7	启动轴油封 16 × 28 × 7	1
5	B00820000500252	SCREW M5 × 25	螺钉 M5 × 25	1
6	90307-1006-0000	OIL SEAL 6.5 × 14.5 × 7	转速输出轴油封 6.5 × 14.5 × 7	1
7	93301-60671014400	THRUST WASHER 6.7 × 1 × 14.4	止推垫圈 6.7 × 1 × 14.4	1
8	87301-1008-0000	EXPORT SHAFT	转速输出轴	1
9	2242A-1008-0000	CONTROLLING ARM ASSEMBLY, CLUTCH	离合器操纵臂组合	1
10	90101-10068000190	O-RING 6.8 × 1.9	O 形密封圈 6.8 × 1.9	1
11	2242A-1008-0000	SPRING, CONTROLLING ARM, CLUTCH	离合器操纵臂弹簧	1
12	2242A-1008-0000	CAM, CLUTCH SEPARATE	离合器分离凸轮	1
13	91523-1008-0000	PIN, CONTROLLING ARM	操纵臂卡销	1
14	12421-1008-1000	ASSEMBLY, RIGHT CRANKCASE COVER	右曲轴箱盖组合 (鲸鱼款)	1
15	14301-1006-0000	DIPSTICK	机油尺组合	1
16	90101-10180000300	O-RING 18 × 3	O 形密封圈 18 × 3	1
17	91521-08001400000	DOWEL PIN 8 × 14	定位销 8 × 14	2
18	90206-1008-0000	GASKET, RIGHT CRANKCASE COVER	右曲轴箱盖密封垫	1
19	B166740A0600407	BOLT M6 × 40	小盘螺栓 M6 × 40	5
20	B166740A0600507	BOLT M6 × 50	小盘螺栓 M6 × 50	2
21	B166740A0600207	BOLT M6 × 20	小盘螺栓 M6 × 20	3
22	B166740A0600287	BOLT M6 × 28	小盘螺栓 M6 × 28	2
23	B00818000600122	SCREW M6 × 12	螺钉 M6 × 12	4
24	91521-10001400000	DOWEL PIN 10 × 14	定位销 10 × 14	2

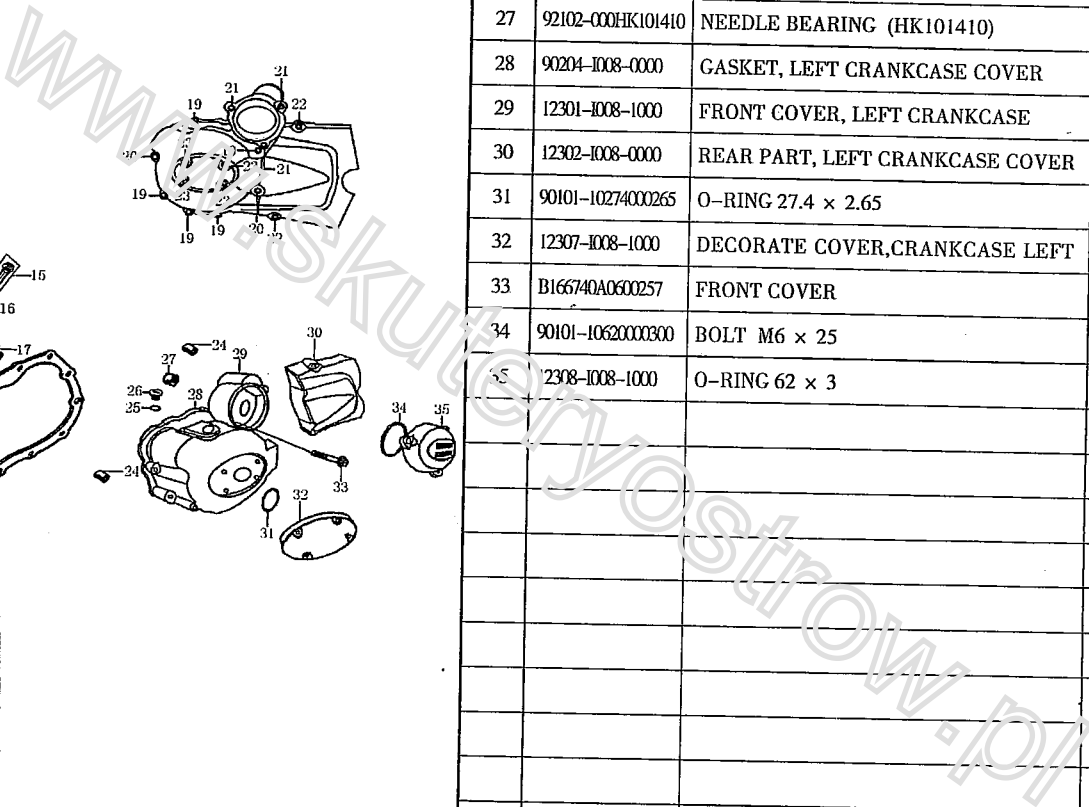


FIG.3 曲轴箱盖 CRANKCASE COVER

[illegible]

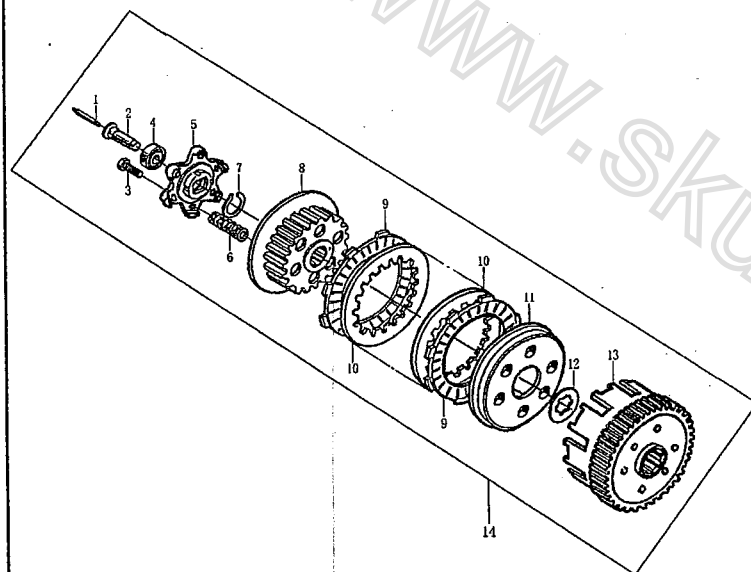


FIG.4 离合器 (CG 状态) CLUTCH

[illegible]

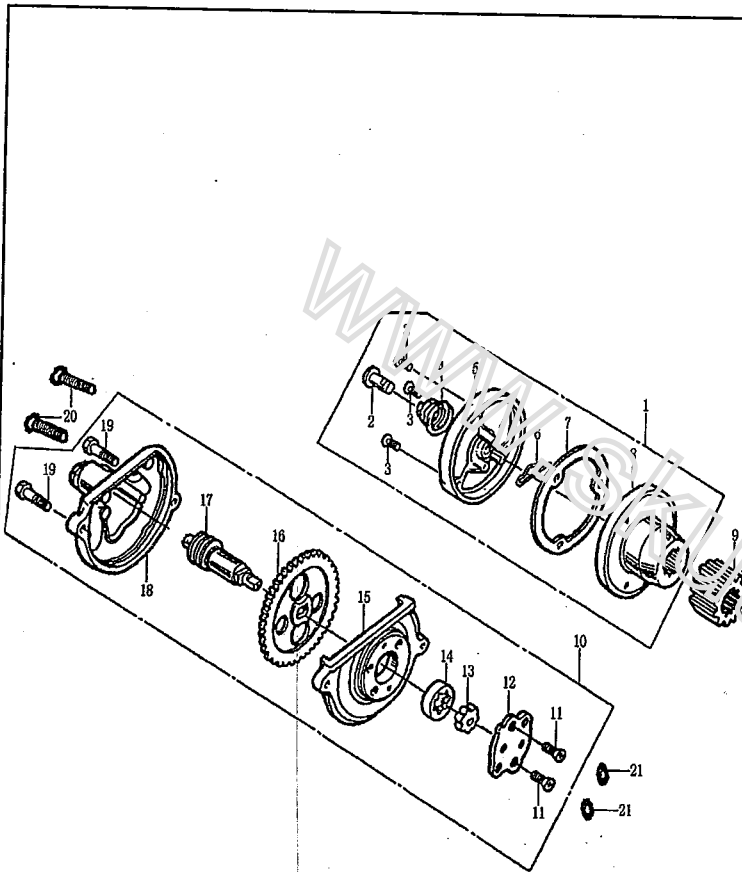


FIG.5 机油泵 OIL PUMP

RET. NO.	PART NO.	DESCRIPTION	名 称	Q'TY
1	14200-1006-0000	ASSEMBLY, OIL FILTER	机油滤清器部件	1
2	14201-1006-0000	THROUGH OIL TUBE, OIL FILTER	机油滤清器导油管	1
3	B00820000500122	SCREW M5 × 12	螺钉 M5 × 12	3
4	14202-1006-0000	SPRING, THROUGH OIL TUBE	导油管弹簧	1
5	14207-1006-0000	COVER, OIL FILTER	机油滤清器盖	1
6	14208-1006-0000	SPLIT PIN, OIL FILTER	机油滤清器开口销	1
7	90209-1006-0000	GASKET, END COVER, OIL FILTER	滤清器端盖密封垫	1
8	14205-1006-0000	OIL FILTER BODY	机油滤清器体	1
9	23101-1008-0000	DRIVER GEAR	主动齿轮	1
10	14100-1008-0100	ASSEMBLY, OIL PUMP	机油泵部件	1
11	B00819000400122	SCREW M4 × 12	螺钉 M4 × 12	2
12	14108-1008-0100	COVER, OIL PUMP	机油泵盖板	1
13	14111-1008-0100	INNER ROTOR, OIL PUMP	机油泵内转子	1
14	14112-1006-0100	OUTER ROTOR, OIL PUMP	机油泵外转子	1
15	14110-1006-0100	CASE, OIL PUMP	机油泵壳体	1
16	14102-1008-0100	GEAR, OIL PUMP	机油泵齿轮	1
17	14107-1008-0100	DRIVE SHAFT, OIL PUMP	齿轮驱动轴	1
18	14113-1006-0000	COVER, OIL PUMP GEAR	机油泵齿轮盖	1
19	B05783000500207	BOLT M5 × 20	螺栓 M5 × 20	2
20	B00819010600302	SCREW M6 × 30	螺钉 M6 × 30	2
21	90101-10094000240	O-RING 9.4 × 2.4	O形密封圈 9.4 × 2.4	2



[illegible]



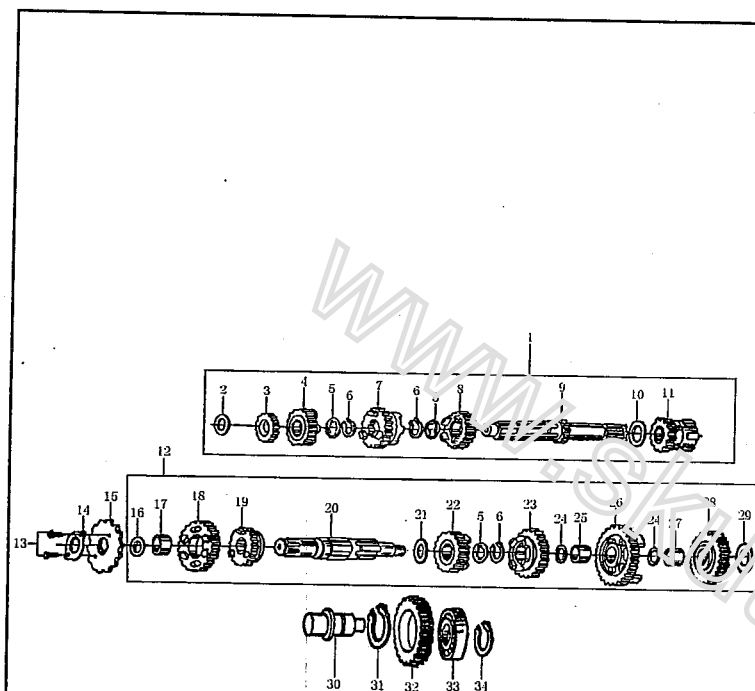


FIG.8 传动机构 TRANSMISSION MECHANISM

RET. NO.	PART NO.	DESCRIPTION	名 称	Q'TY
1	23220-JA59-0000	MAIN SHAFT ASSY	主轴组合	1
2	93301-E1521002500	THRUST WASHER 15.2 × 1 × 25	止推垫圈 15.2 × 1 × 25	1
3	23224-JA59-0000	REVERS DRIVE GEAR, MAIN SHAFT	倒档主动齿轮	1
4	23222-JA59-0002	MAINSHAFT 2ND SPEED GEAR	主轴 2 档齿轮	1
5	23223-1008-0000	SPACER WASHER	齿轮隔圈	3
6	B0089402200000000	CIRCLIP 20	挡圈 20	3
7	23222-JA59-0003	MAINSHAFT 3RD SPEED GEAR	主轴 3 档齿轮	1
8	23222-JA59-0004	MAINSHAFT 4TH SPEED GEAR	主轴 4 档齿轮	1
9	23221-JA59-0000	PIVOT, MAINSHAFT	主轴芯轴	1
10	93301-E2000527000	THRUST WASHER 20 × 0.5 × 27	止推垫圈 20 × 0.5 × 27	1
11	23271-JA59-0000	ASSEMBLY, STARTING GEAR	起动齿轮组合	1
12	23240-JA59-0000	ASSEMBLY, COUNTERSHAFT	副轴组合	1
13	B0578000000000000	BOLT M6 × 10	螺栓 M6 × 10	2
14	23402-1008-0000	FIXING PLATE, DRIVE SPROCKET	主动链轮固定板	1
15	23401-1008-0000	DRIVE SPROCKET	主动链轮	1
16	93301-E2001027000	THRUST WASHER 20 × 1 × 27	止推垫圈 20 × 1 × 27	1
17	23247-JA59-0000	SLEEVE, COUNTERSHAFT GEAR	副轴齿轮轴套	1
18	23243-JA59-0000	REVERS DRIVE GEAR, COUNTERSHAFT	副轴倒档齿轮	1
19	23242-JA59-0002	COUNTERSHAFT 2ND SPEED GEAR	副轴 2 档齿轮	1
20	23241-JA59-0000	PIVOT, COUNTERSHAFT	副轴芯轴	1
21	93301-E1501030000	THRUST WASHER 15 × 1 × 30	止推垫圈 15 × 1 × 30	1
22	23242-JA59-0003	COUNTERSHAFT 3RD SPEED GEAR	副轴 3 档齿轮	1
23	23242-JA59-0004	COUNTERSHAFT 4TH SPEED GEAR	副轴 4 档齿轮	1
24	23223-1006-0000	SPACER WASHER	齿轮隔圈	2

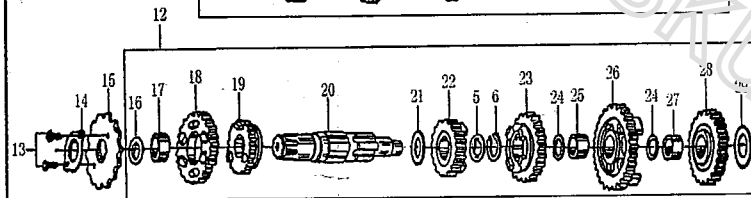
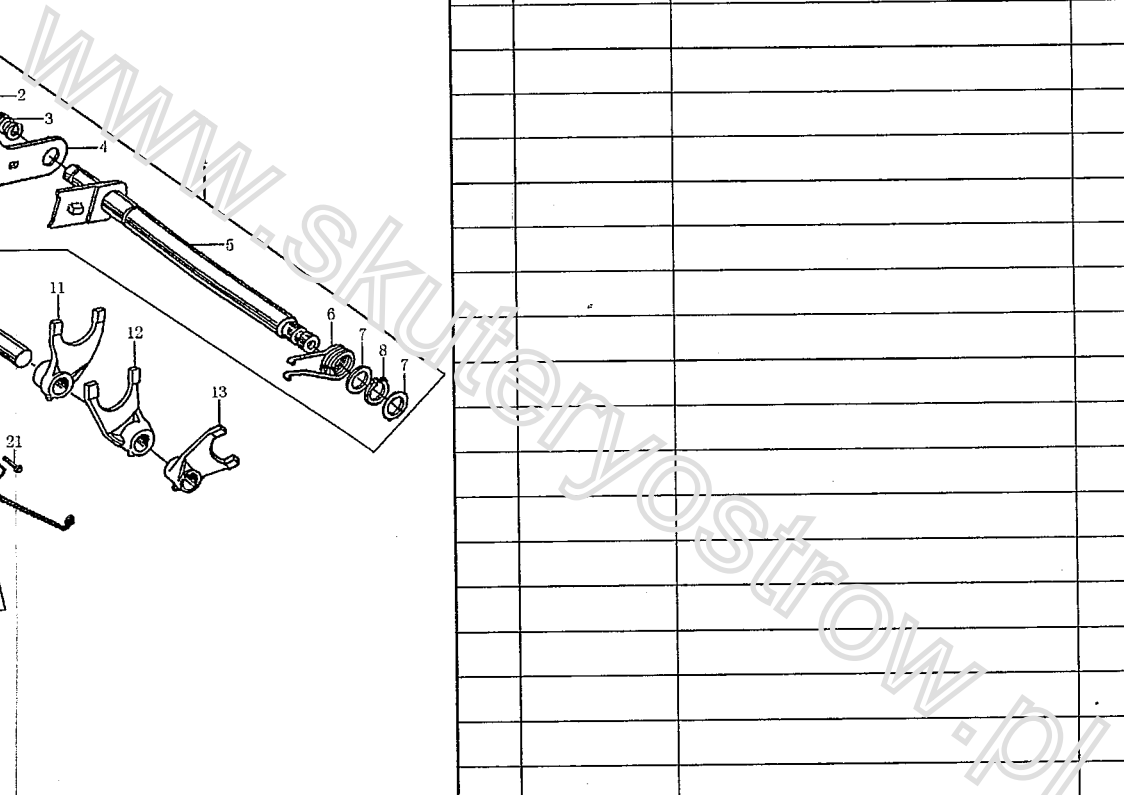
[illegible]

FIG.9 变速机构 GEARSHIFT MECHANISM				
RET. NO.	PART NO.	DESCRIPTION	名 称	Q'TY
1	24300-1006-0001	ASSEMBLY, GEARSHIFT LEVER	换档臂部件	1
2	B0089401120000000	CIRCLIP 12	挡圈 12	1
3	24303-1006-0000	SPRING, GEARSHIFT LEVER	换档板弹簧	1
4	24319-1006-0000	LEVEL, GEARSHIFT	换档板	1
5	24301-1006-0000	GEARSHIFT SHAFT	换档轴	1
6	24302-1006-0000	RETURN SPRING, GEARSHIFT LEVER	换档回位弹簧	1
7	93301-51400520000	WASHER 14 × 0.5 × 20	换档臂垫圈 14 × 0.5 × 20	2
8	B0089401140000000	CIRCLIP 14	挡圈 14	1
9	B166740A0600127	BOLT M6 × 12	小盘螺栓 M6 × 12	1
10	24107-1006-0000	SHAFT, FORK	拨叉轴	1
11	24104-JA59-0300	RIGHT FORK, COUNTERSHAFT	副轴右拨叉	1
12	24106-JA59-0300	CENTER FORK, MAINSHAFT	主轴拨叉	1
13	24105-JA59-0300	LEFT FORK, COUNTERSHAFT	副轴左拨叉	1
14	B05783000600207	BOLT M6 × 25	螺栓 M6 × 25	1
15	B00093000600000	WASHER 6	弹垫 6	1
16	24202-1006-0600	STOPPING PLATE	五星板	1
17	B0011901040100000	PIN 4 × 10	销子 4 × 10	1
18	24213-JA59-1600	GEARSHIFT DRUM	变速鼓	1
19	90305-1008-0000	OIL SEAL 14 × 22 × 5	档显油封 14 × 22 × 5	1
20	8803B-JA59-0000	CABLE ASSEMBLY, GEAR INDICATION	档显线束组合	1
21	B166740A0600127	BOLT M6 × 12	小盘螺栓 M6 × 12	1
22	B05783000600207	BOLT M6 × 20	螺栓 M6 × 20	1
23	2434A-1008-0000	LOCATING PLATE UNIT	定位板组合	1
24	24304-1008-0000	RETURN SPRING, LOCATING PLATE	定位板复位弹簧	1

[illegible]

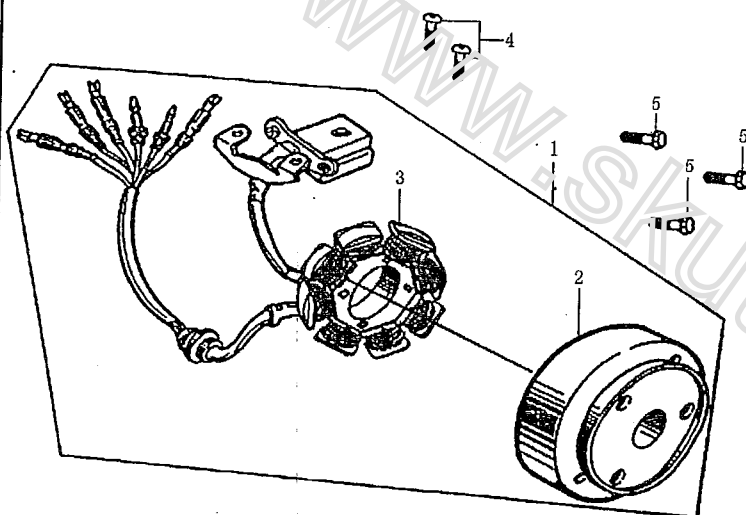
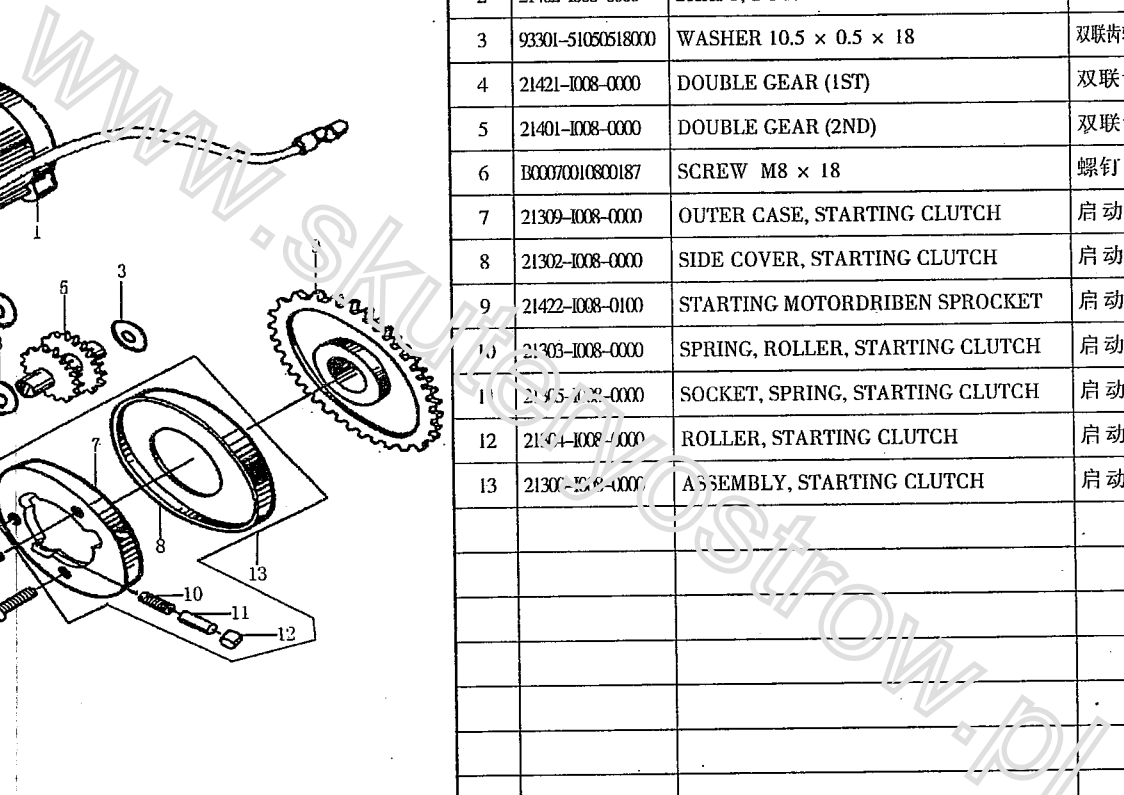


FIG.10 磁电机总成 MAGNETO COMP

[illegible]

[illegible]

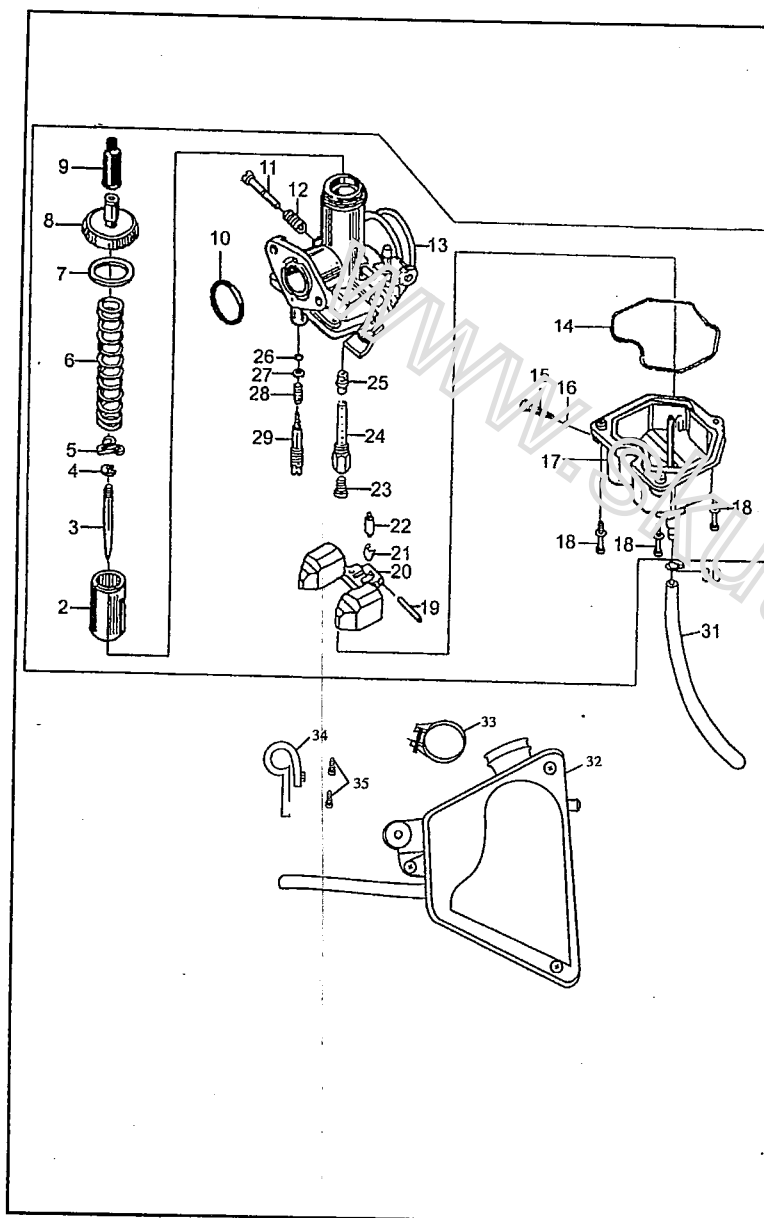


FIG.12 CARBURETOR

ASSY. NO.	RET. NO.	PART NO.	DESCRIPTION	名 称	Q'TY
	1	161000-001	CARBURETOR ASSY	化油器总成 PZ26	1
	2	161001-001	AIR THROTTLE	节气门	1
	3	161002-001	NEEDLE, OIL	油 针	1
	4	161003-001	CIRCLIP	开口挡圈	1
	5	161004-001	CLIP	V 型长簧	1
	6	161005-001	RETURN SPRING,AIR THROTTLE	节气门回位弹簧	1
	7	161006-001	GASKET,UPPER COVER	上盖密封垫	1
	8	161007-001	UPPER COVER	上 盖	1
	9	161008-001	GROMMET,CABLE	拉线护套	1
	10	161009-001	SEAL RING.	密封圈	1
	11	161010-001	ADJUSTINGSCREW,AIRTHROTTLE	节气门调整螺钉	1
	12	161010-002	SPRING,ADJUSTING SCREW	节气门调整螺钉弹簧	1
	13	160000-001	CARBURETOR BODY	化油器本体组件	1
	14	160001-001	CASKEY, FLOAT CHAMBER	浮子室密封环	1
	15	160002-001	DRAIN SCREW	放油调节针	1
	16	160003-001	DRAIN GASKET	放油密封垫	1
	17	160004-001	BODY FLOAT	浮子室本体	1
	18	160005-001	SCREW UNIT	螺钉组件	3
	19	160006-001	FLOAT PIN	浮子销	1
	20	160007-001	FLOAT COMP	浮子组件	1
	21	160008-001	HOOK,NEEDLE VALVE	针阀拉钩	1
	22	160009-001	NEEDLE VALVE	针 阀	1
	23	160010-001	PILOT AIR	主量孔	1
	24	160011-001	JET, NEEDLE	主泡沫喷管	1

17


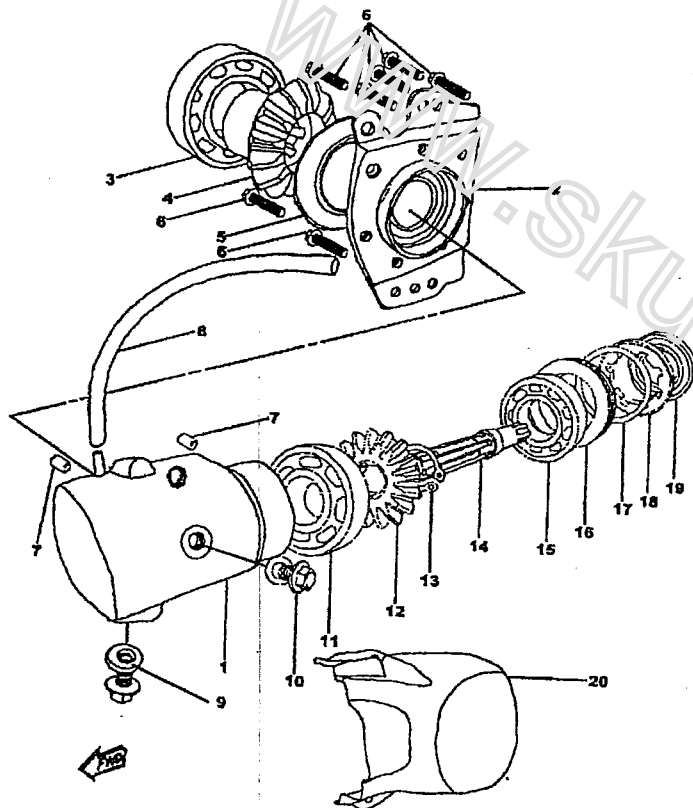


FIG. 13 REAR CRANKCASE COVER

ASSY. NO.	REF. NO.	PART NO.	DESCRIPTION	名 称	Q'TY
	1	241000-001	FRONT CRANKCASE	前传动箱体	1
	2	241001-001	CRANKCASE, REAR	安装座	1
	3	241002-001	BEARING (B6006)	轴承	1
	4	241003-001	GEAR, DRIVE	主动齿轮	1
	5	241004-001	SHIM, PINION	密封圈	1
	6	241005-001	BOLT, FLANGE (M6)	螺栓	6
	7	241006-001	PIN	定位销	1
	8	241007-001	HOSE	通气管	1
	9	241007-002	PLUG, STRAIGHT SCREW	螺栓 / 密封圈	1/1
	10	241007-003	PLUG, OIL	螺栓 / 密封圈	1/1
	11	241008-001	BEARING (B6005)	轴承	1
	12	241009-001	GEAR, FINAL DRIVEN	从动齿轮	1
	13	241010-001	CIRCLIP	卡圈	1
	14	241011-001	AXLE, DRIVE	传动轴	1
	15	241012-001	BEARING (B6303)	轴承	1
18-A	16	241012-002	HOUSING, BEARING	衬套	1
	17	241012-003	O RING	O 型圈	1
	18	241012-004	NUT	锁紧螺母	1
	19	241012-005	OIL SEAL	油封	1
	20	241013-001	OUTER COVER, LR. CRANKCASE	左后盖	1

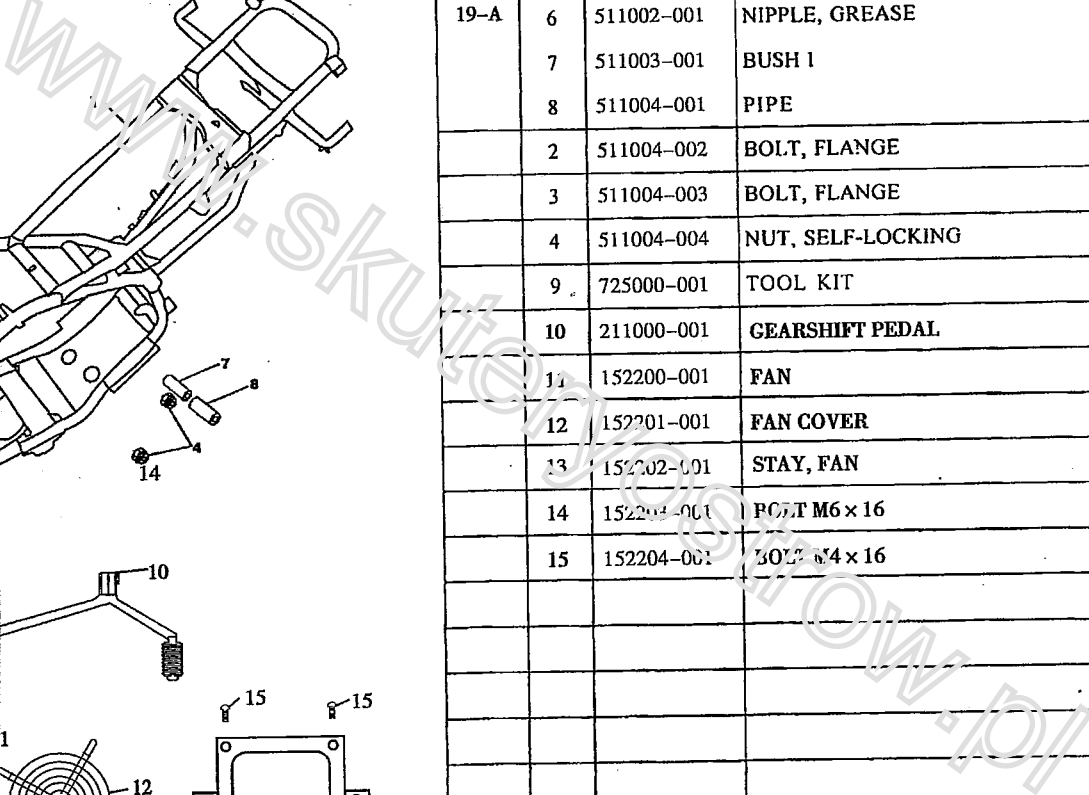

ASSY. NO.	REF. NO.	PART NO.	DESCRIPTION	名 称	Q'TY
--------------	-------------	----------	-------------	-----	------

10

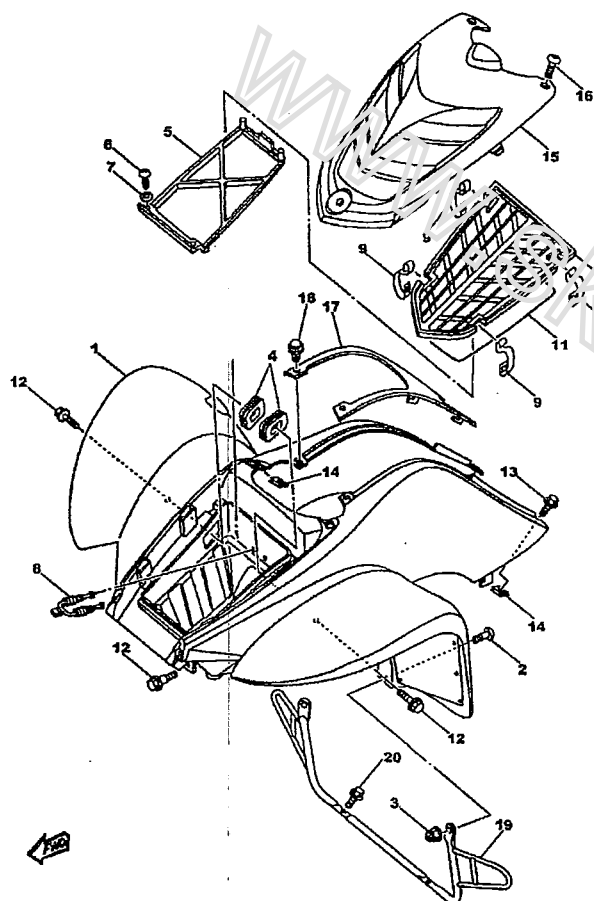


FIG. 15 FRONT FENDER

ASSY. NO.	REF. NO.	PART NO.	DESCRIPTION	名 称	Q'TY
	1	804100-001	FRONT FENDER COMP.	前挡泥板	1
	2	804100-002	SCREW, BINDING	螺栓	2
	3	804100-003	NUT, SELF-LOCKING	螺母	2
	4	804101-001	DUCT	吸风口胶圈	2
20-A	5	170100-001	GUIDE	空滤器支架	2
	6	170100-002	SCREW	螺钉	2
	7	170100-003	WASHER	平垫	1
	10	170101-001	CAP, CLEANER CASE 1	盖板	1
	11	170101-002	SEAL	密封圈	1
	8	170102-001	HOOK	培条	4
	9	170102-002	HOOK	盖板卡子	1
	12	170102-003	BOLT	螺栓	2
	13	170102-004	BOLT, WITH WASHER	螺栓	2
	14	170102-005	NUT, SPRING	卡子	4
	15	807100-001	FENDER, FRONT 2	前面罩	1
	16	807100-002	BOLT, HEXAGON SOCKET HEAD	螺栓	2
	17	800600-001	COVER, TOP	油箱护板	1
	18	800600-002	RIVET	橡胶安装钉组件	2
	19	804004-001	STAY, FENDER 1	前挡泥板支架	1
	20	804004-002	BOLT, FLANGE	螺栓	2

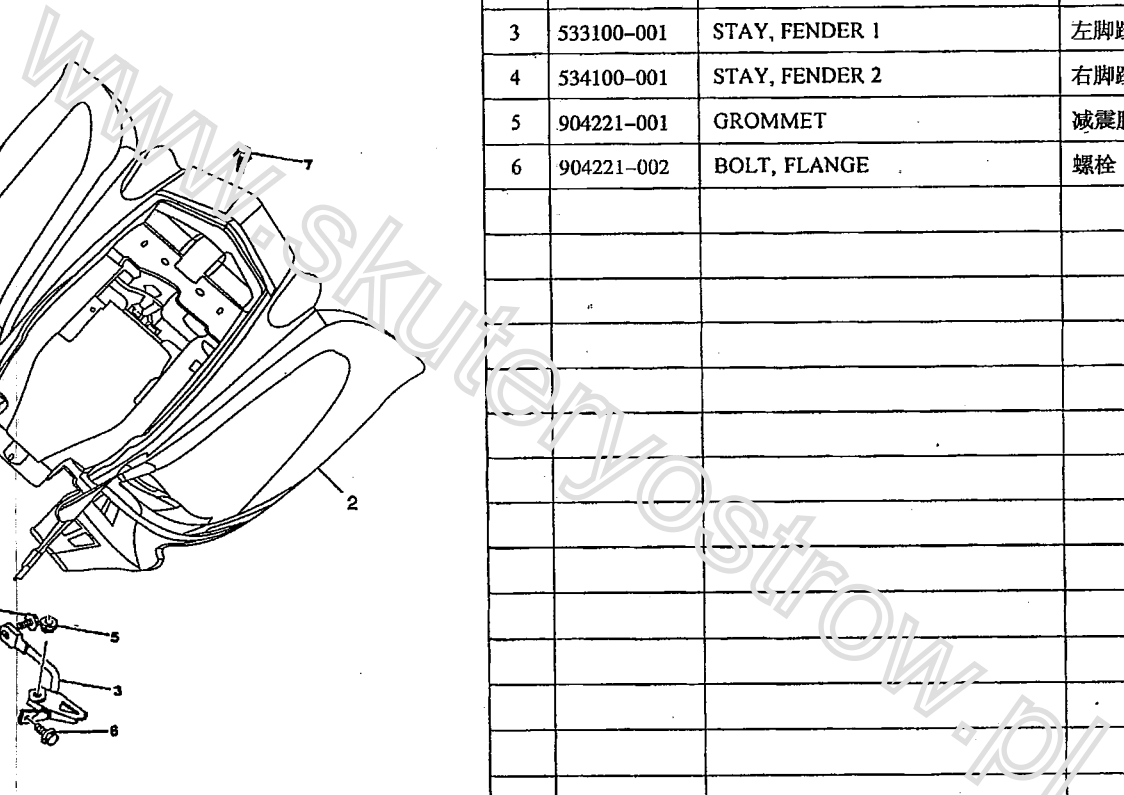


FIG. 16 REAR FENDER

[illegible]

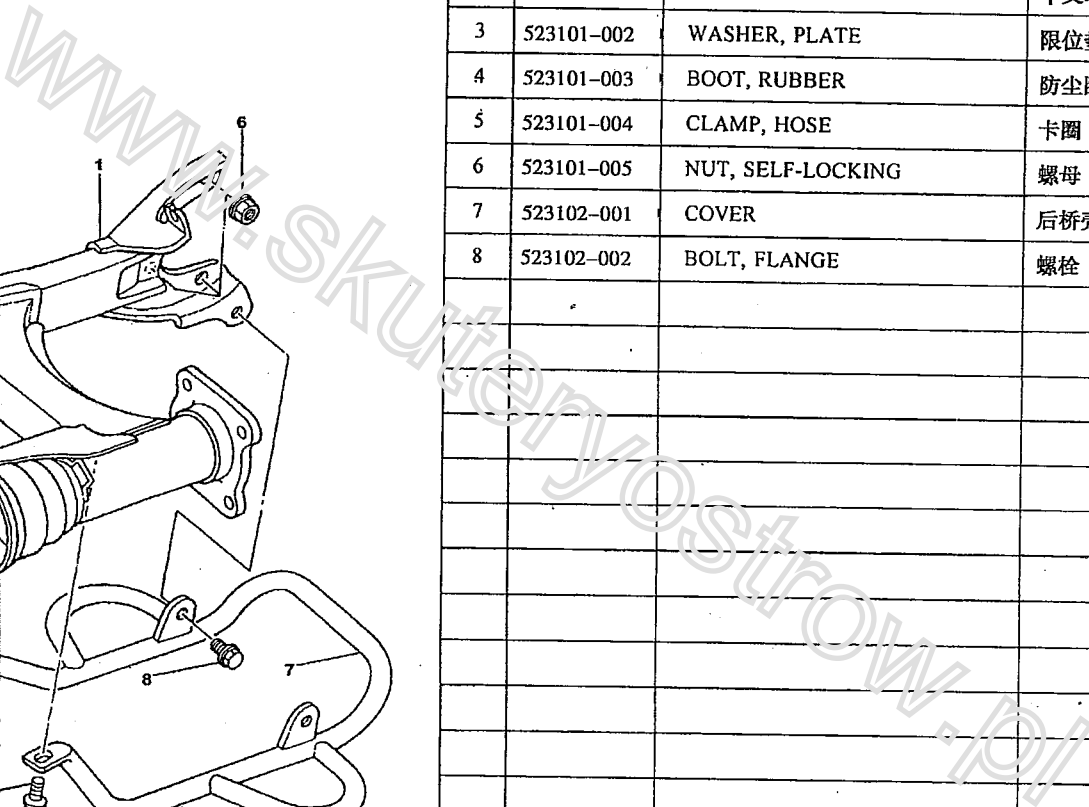


FIG. 17 REAR ARM

[illegible]

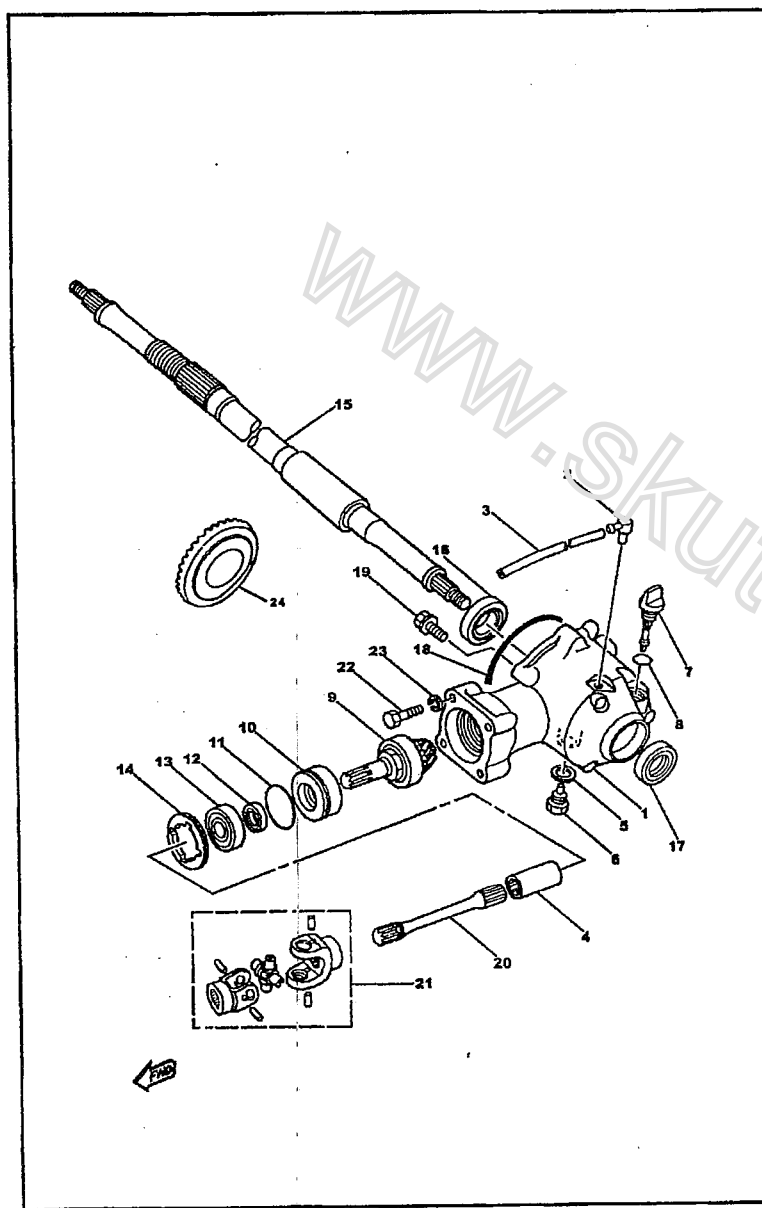


FIG. 18 SHAFT DRIVE

REF. NO.	PART NO.	DESCRIPTION	名 称	Q'TY
1	242000-001	HOUSING, DRIVE SHAFT	后传动箱体	1
2	242001-001	BREATHER	通气嘴	1
3	242002-001	HOSE (L1200)	通气管	1
4	430003-001	COUPLING, GEAR	花键套	1
5	430003-002	PLUG, STRAIGHT SCREW	铝垫圈	1
6	430003-003	GASKET	螺栓	1
7	430004-001	PLUG, OIL LEVEL	机油尺	1
8	430004-002	O-RING	O型圈	1
9	43005-001	DRIVE PINION COMP.	主动齿组件	1
10	43005-002	SPACER	衬套	1
11	43005-003	O-RING	O型圈	1
12	43005-004	OIL SEAL	油封	1
13	401300-001	BEARING (B6303)	轴承	1
14	401300-002	NUT	锁紧螺母	1
15	902002-001	REAR AXLE	后轮轴	1
16	902002-002	BEARING	轴承	1
17	902002-003	OIL SEAL	油封	1
18	902002-004	O-RING	O型圈	1
19	902002-005	BOLT, FLANGE	螺栓	1
20	902002-006	SHAFT, DRIVE	中间轴	1
21	242100-001	CROSS JOINT COMP	方向节组件	1
22	242100-002	BOLT	螺栓	4
23	242100-003	WASHER, SPRING	弹垫	4
24	242101-001	RING, GEAR	后轮轴从动齿轮	1

[illegible]

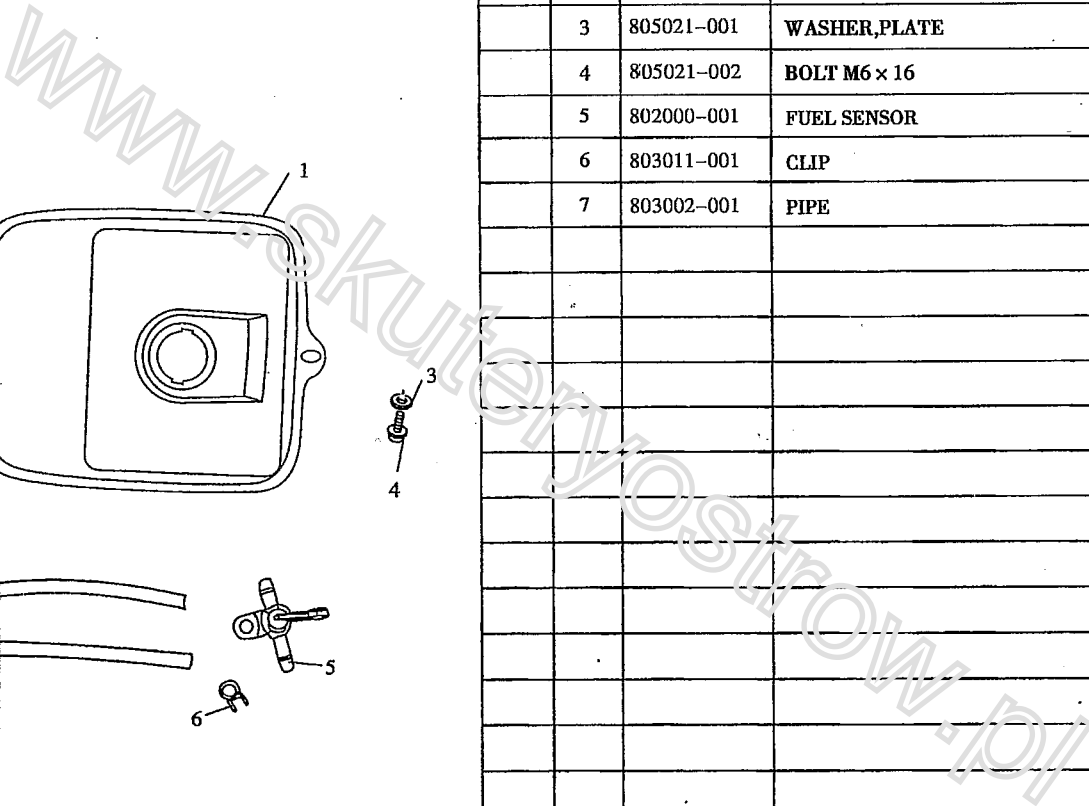


FIG. 22 FUEL TANK

[illegible]

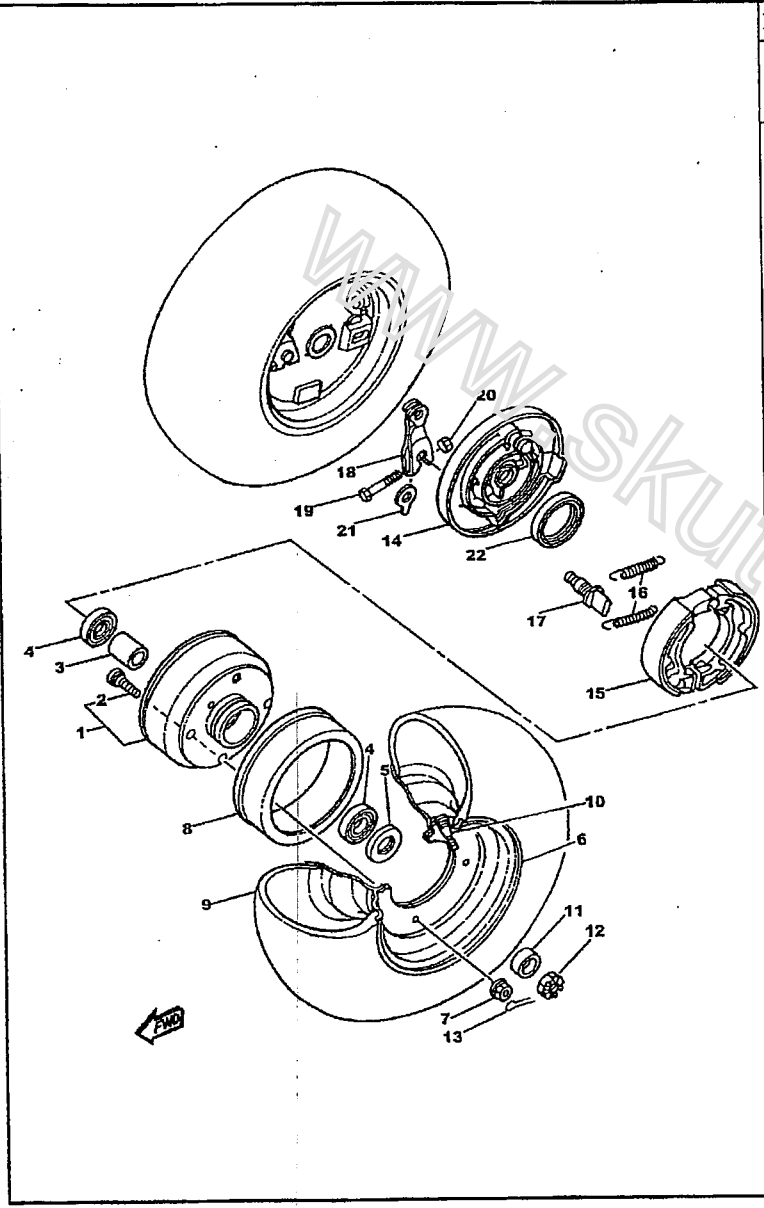
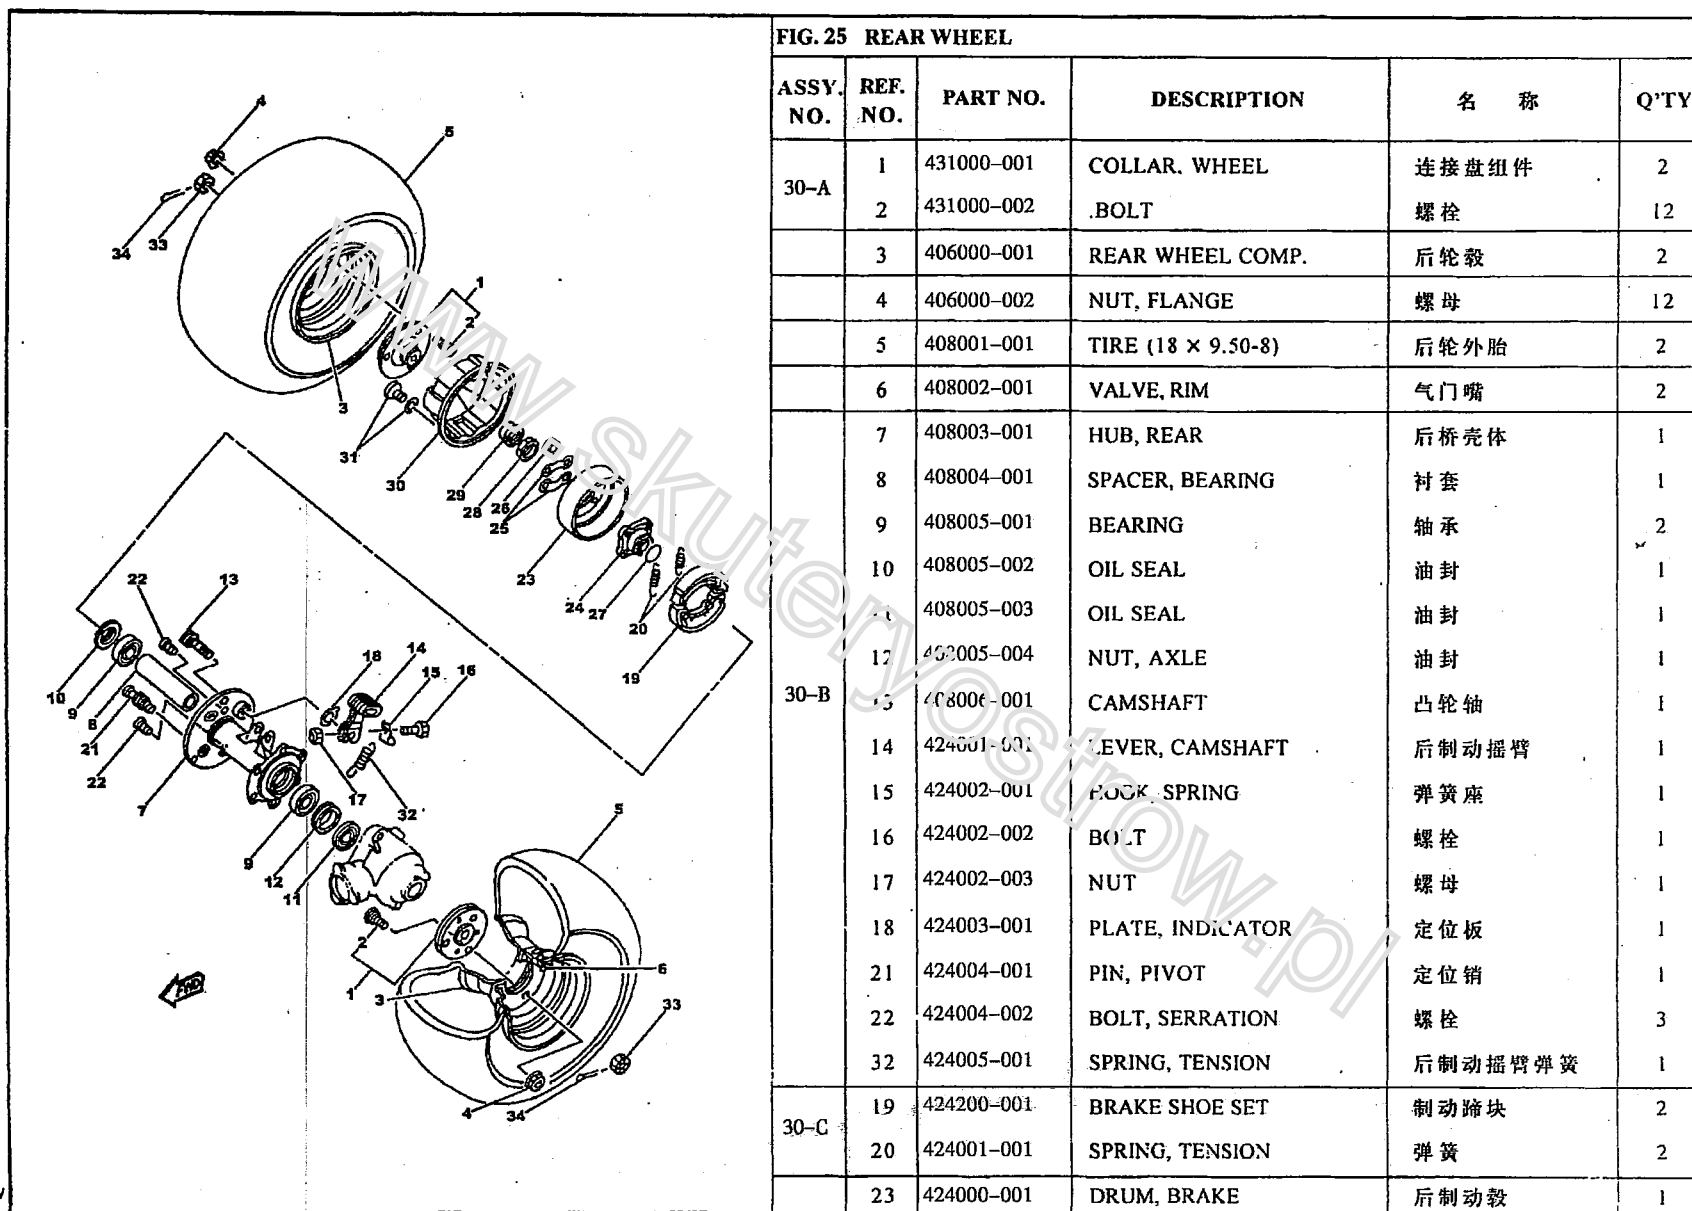


FIG. 24 FRONT WHEEL					
ASSY. NO.	REF. NO.	PART NO.	DESCRIPTION	名 称	Q'TY
29-A	1	423100-001	HUB, FRONT	前制动器	2
	2	423100-002	.BOLT	专用螺栓	4
	3	423101-001	SPACER, BEARING	套管	2
	4	423200-001	BEARING (B6003)	轴承	4
	5	423200-002	OIL SEAL	油封	2
	8	423200-003	RING 1	减震胶圈	2
	11	423200-004	COLLAR	衬管	2
	12	423200-005	NUT, CASTLE	开槽螺母	2
	6	402000-001	WHEEL COMP.	前轮毂	2
	7	402000-002	NUT, FLANGE	螺母	8
	9	404001-001	TIRE FRONT (19 x 7-8)	前轮外胎	2
	10	404002-001	VALVE, RIM	气门嘴	2
	13	404003-001	PIN, COTTER	开口销	2
29-B	14	404003-002	PLATE, BRAKE SHOE	左/右制动器座	1/1
	15	423200-001	BRAKE SHOE SET	制动蹄块	4
	16	423001-001	SPRING, TENSION	弹簧	4
	17	423002-001	CAMSHAFT	凸轮轴	2
	18	423001-001	LEVER, CAMSHAFT	摇臂	2
	19	423001-002	BOLT	螺栓	2
	20	423001-003	NUT	螺母	2
	21	423002-001	PLATE, INDICATOR	定位板	2
	22	423002-002	OIL SEAL	油封	2



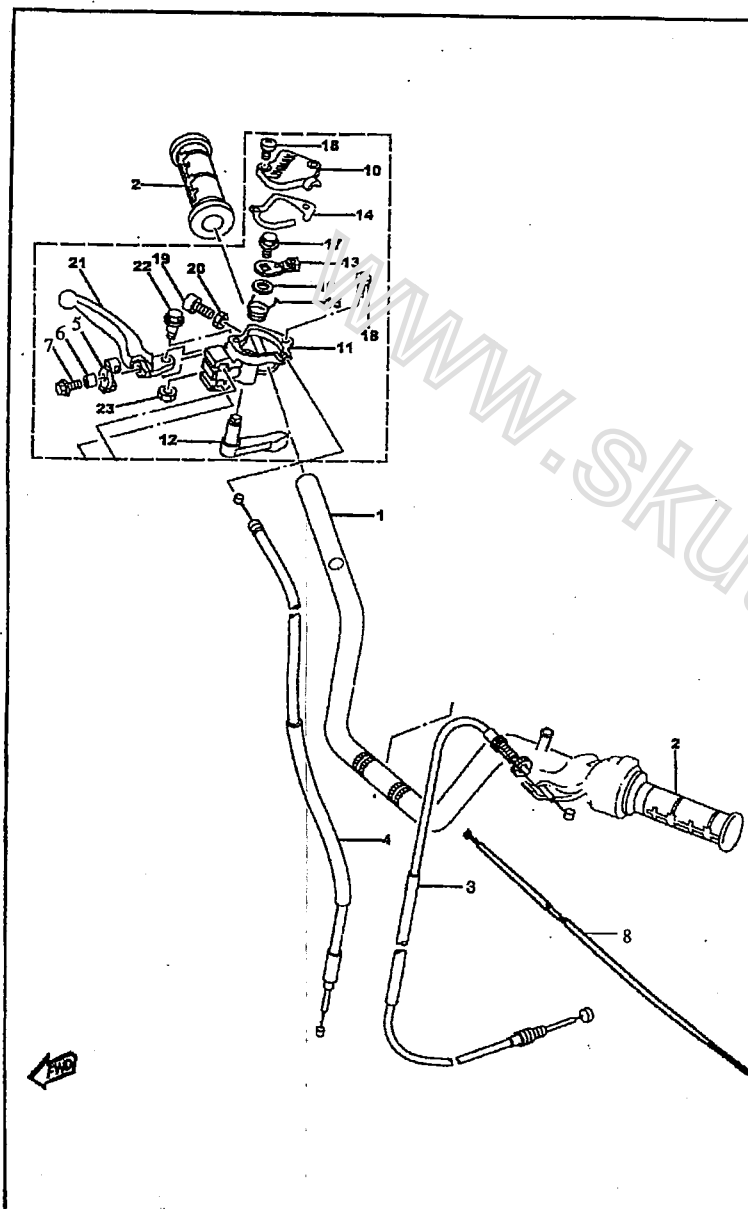


FIG. 26 STEERING HANDLE. CABLE

ASSY. NO.	REF. NO.	PART NO.	DESCRIPTION	名称	Q'TY
	1	600001-001	HANDLEBAR	手把管	1
	2	600100-001	GRIP	手把胶	2
	3	606000-001	CABLE, CLUTCH	离合线	1
	4	607000-001	CABLE, THROTTLE 1	油门线	1
31-B	5	372202-001	JOINT, CABLE	杠杆摇臂	1
	6	372202-002	COLLAR	衬套	1
	7	372202-003	BOLT, FLANGE	螺栓	1
	8	610000-001	CABLE, CHOKE	风门线	1
	10	3712004-001	CAP, GEAR	加油器盖	1
	11	371203-001	BODY, THROTTLE	加油器座	1
	12	371205-001	LEVER, THROTTLE	加油手柄	1
	13	371206-001	ARM. THROTTLE	摇臂	1
	14	371207-001	GASKET	密封垫	1
	15	371208-001	SPRING, TORSION	回位弹簧	1
	16	371208-002	WASHER, PLATE	平垫	2
	17	371208-003	BOLT, FLANGE	螺栓	1
	18	371208-004	SCREW, PAN HEAD	螺钉	1
	19	371208-005	BOLT	调节螺钉	1
	20	371208-006	NUT	锁紧螺母	1
	21	372201-001	LEVER 2	手柄	1
	22	372201-002	BOLT	螺栓	1
	23	372201-003	NUT, U	螺母	1

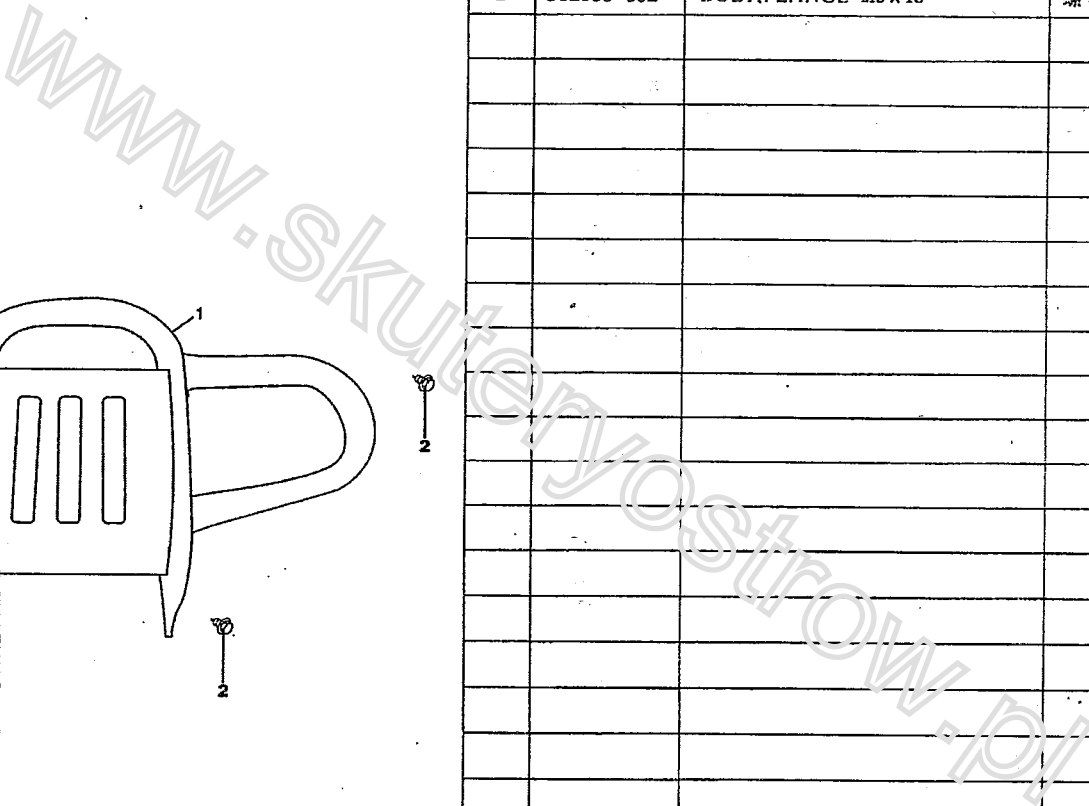
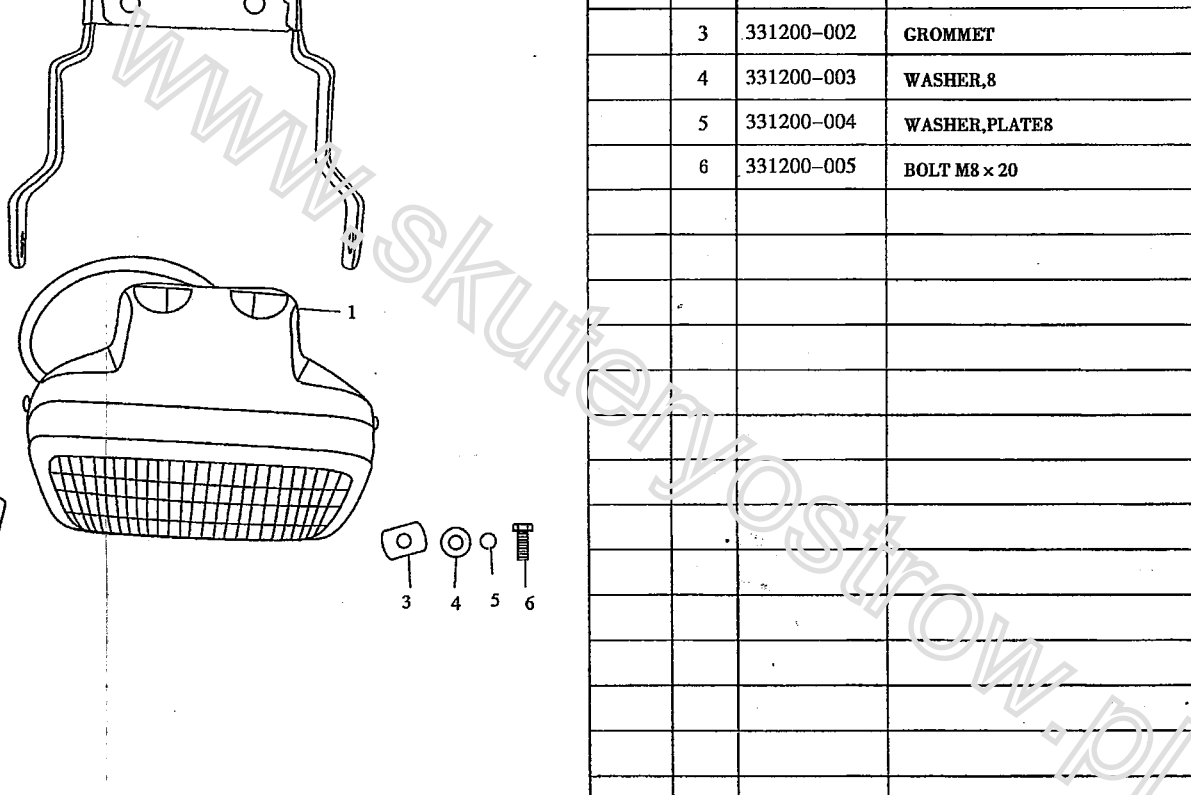


FIG. 28 GUARD

[illegible]

[illegible]

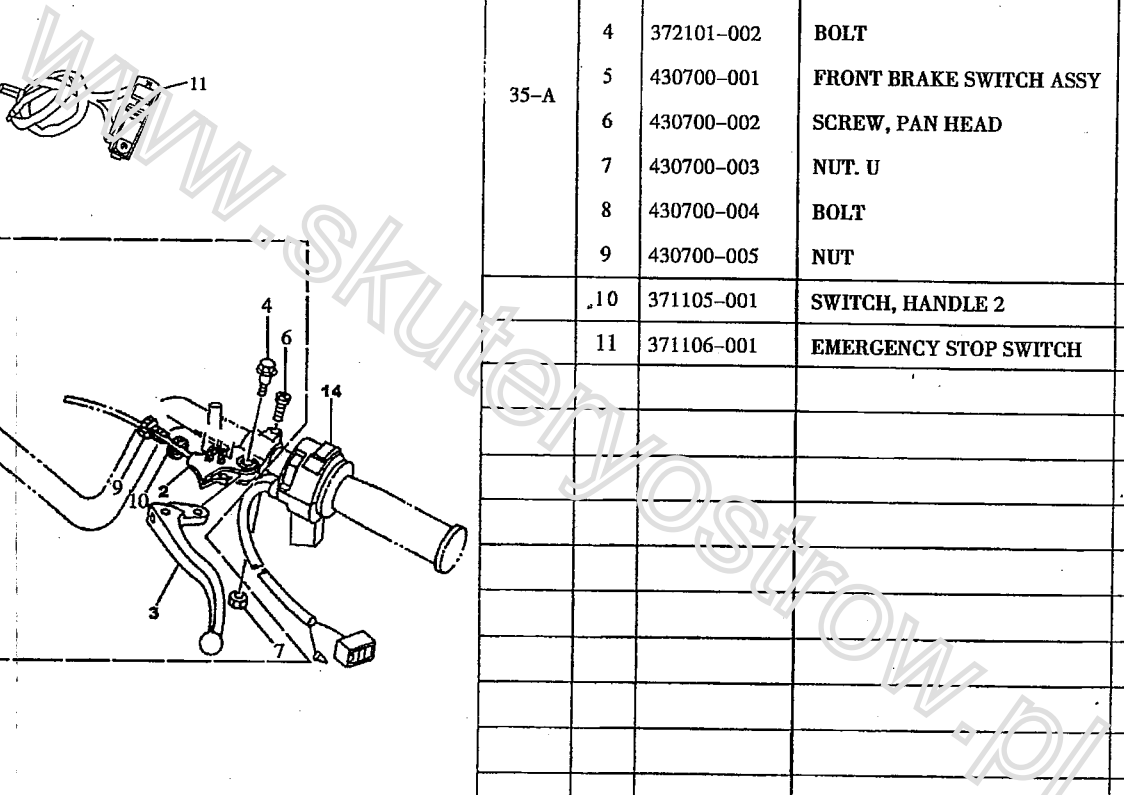


FIG. 30 HANDLE SWITCH. LEVER

[illegible]

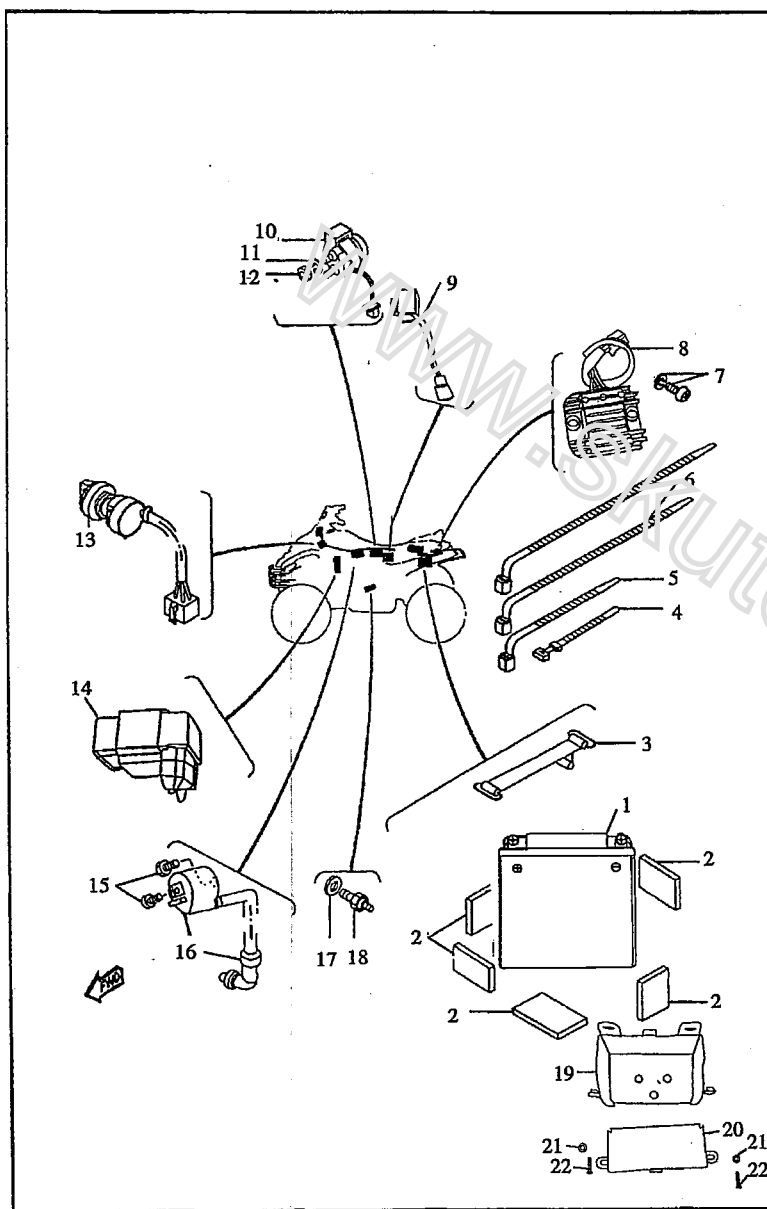


FIG. 31 ELECTRICAL I

ASSY. NO.	REF. NO.	PART NO.	DESCRIPTION	名 称	Q'TY
	1	303100-001	BATTERY ASSY	电瓶	1
	2	905005-001	SEAT,BATTERY	减震泡沫	5
	3	904101-001	BAND,BATTERY	电瓶扎带	1
	4	904102-001	CLAMP I	电缆扎带 I	2
	5	904103-001	CLAMP II	电缆扎带 II	4
	6	904104-001	CLAMP III	电缆扎带 III	4
	7	904104-002	BOLT M6 x 20	螺栓 M6 x 20	2
	8	302000-001	RECTIFIER®ULATOR ASSY	调压器	1
	9	309000-001	REVERSE GEAR CONTROL	倒档控制器	1
	10	301000-001	STARTER RELAY ASSY	起动继电器	1
	11	301000-002	WASHER PLATE	弹垫	2
	12	301000-003	NUT	螺母	2
	13	308000-001	IGNITION SWITCH ASSY	点火开关	1
	14	305000-001	C.D.I	点火器	1
	15	305000-002	BOLT M6 x 20	螺栓 M6 x 20	2
	16	304000-001	IGNITION COIL ASSY	点火线圈	1
	17	304000-002	GASKET	垫圈	1
	18	307200-001	STOP SWITCH	后刹开关	1
	19	303001-001	BOX BATTERY	电瓶盒	1
	20	303002-001	CAP, BOX BATTERY	电瓶盒盖	1
	21	303002-002	GASKET	垫圈	2
	22	303002-003	BOLT M6 x 12	螺栓 M6 x 12	2

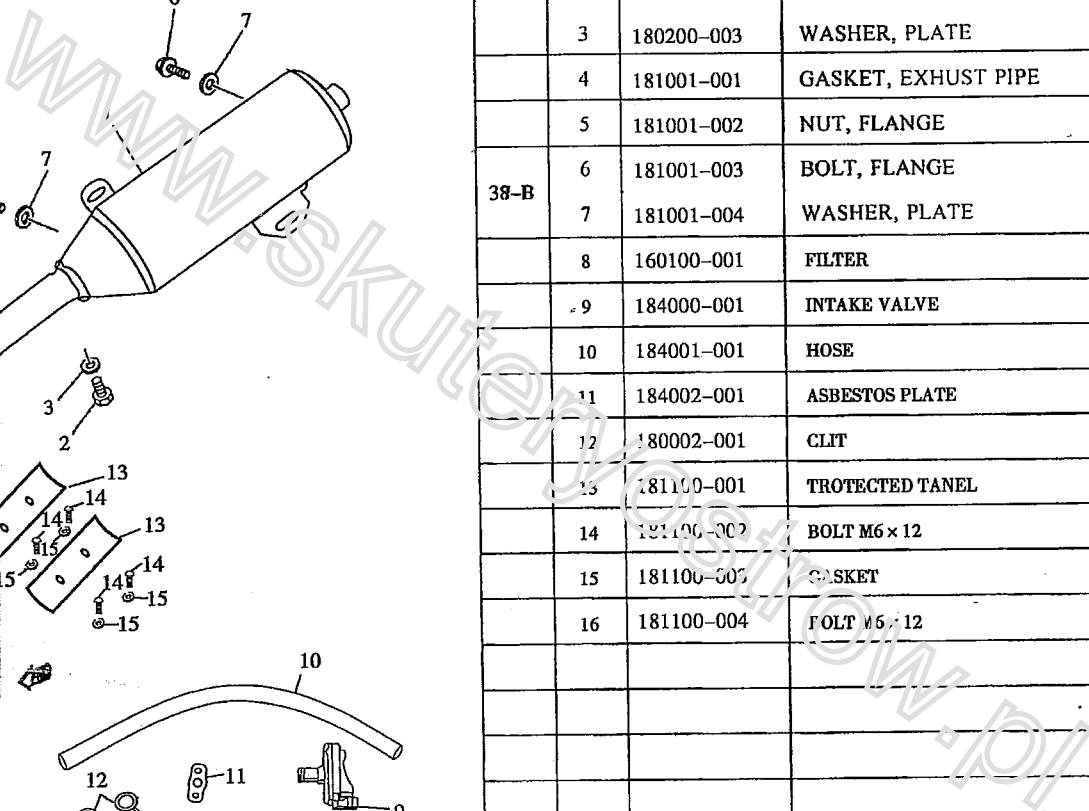
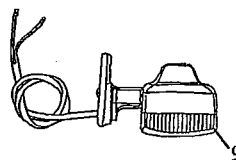


FIG. 33 EXHAUST MUFFLER

[illegible]

[illegible]

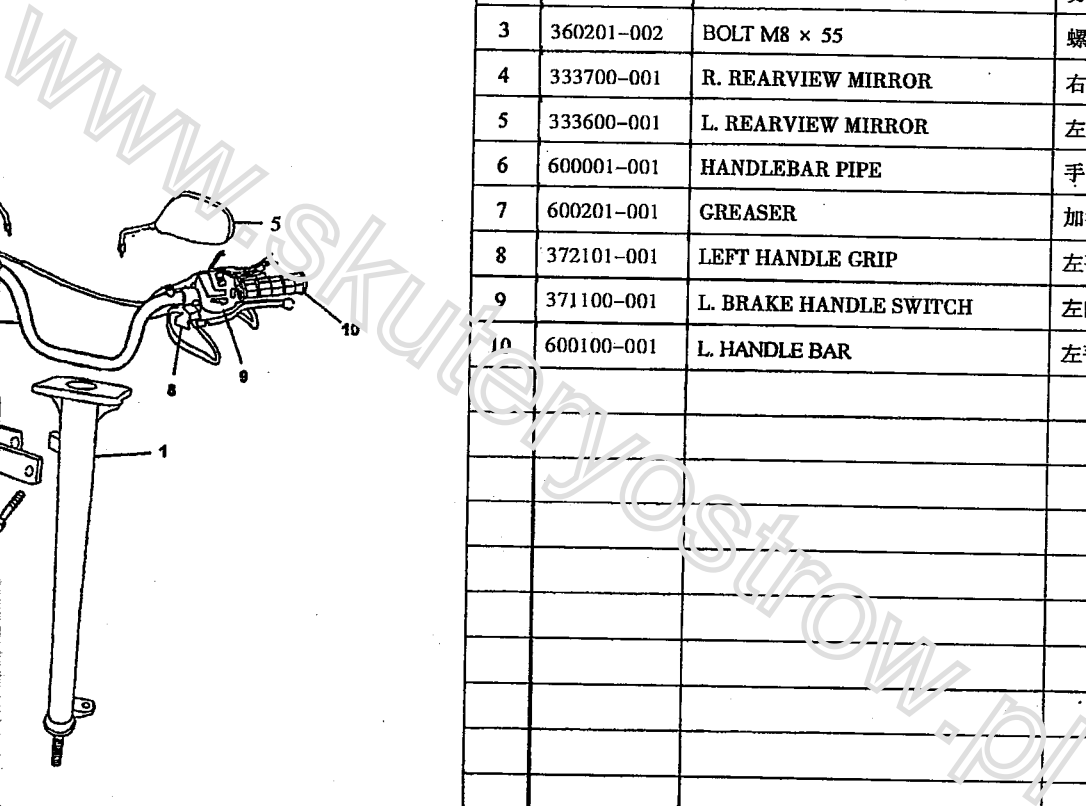


FIG.38 ACCESSORY III

[illegible]